


- FOCUSING. Ajust the lens in or out until a sharp image is obtained.
- 7. To rewind the film reverse the back spool with the front one and vice versa, hook the film in the back spool as shown in the picture and start the motor.

. TRANSMISSIONS.


TRANSMISSIONS.


The above picture show the position of electric wires and transmission components.


AUTO CINE

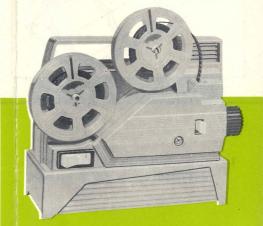





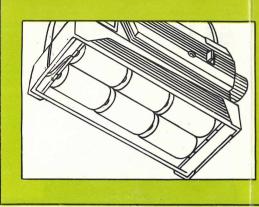

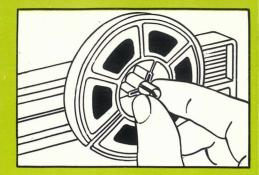

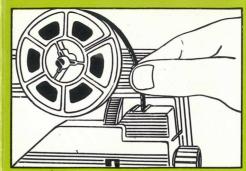

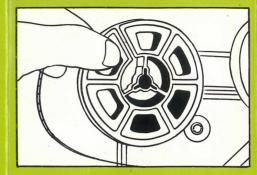

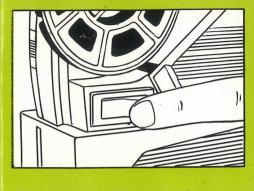

- The operation of the unit is provided by six 1.5 V batteries.
- ATTACHING FEED (FILM) SPOOL.
 Push the spool over the pin of the front arm. This pin is provided with an elastic device which holds the spool.
- 3. Start the motor and thread the film in the slot (as shown) until it advances automatically.

- FASTENING TO REAR SPOOL. Allow a sufficient quantity of film to run, stop the motor, and insert the end in the slot of the wind-up spool.
- Press the switches on both sides for starting of motor and light.