



TO OPERATE BELL PROJECTOR DE LUXE MODEL

Open the Bell Projector by drawing back locking slide at top of casing and remove handle which is attached to handle post (see diagram). Place $4\frac{1}{2}$ -volt battery in position as shown in diagram, making sure that good connection is made against brass contacts A and B. Be certain that the bulb is making contact at point C. Before closing Projector, place handle on "handle spindle" and turn to a horizontal position, i.e., pointing towards the bulb, remove handle and gently close Projector, pushing the locking slide forward to secure. Insert handle in hole provided and the Projector is ready to operate.

To operate always turn handle in clockwise direction. No screen is necessary as the picture can be thrown on to any light coloured surface. **IMPORTANT.** When not in use be certain that the light is off. It will be found that the light switches off when the handle is in a horizontal position. If the Projector is not going to be used for a long period remove the battery.

TO USE WITH TRANSFORMER

Plug in leads where indicated on the back of the Projector, making sure that no battery has been left in the case. **Only a transformer with a 4-volt tapping should be employed. Under no circumstances should this Projector be connected direct to the mains.**

CHANGING FILM. To remove film from case, gently lift from the bottom of casing and then disengage from sprocket wheel (see diagram). To insert a new film, first place it between the tensioner and sprocket wheel, making sure that the teeth on the sprocket wheel engage the holes on the film. Follow round placing film over the posts (see diagram) on both sides of the casing, finishing up by easing it gently over the post in the bottom right-hand corner.

TO RENEW BULB. Remove battery and unscrew bulb. When replacing new bulb be certain to make good contact at point C.

Occasionally lightly grease the bearings which fit over the sprocket and into which the handle is inserted. Both of these will be found close together inside the lid near the top. This will make for smoother action.