




# INSTRUCTIONS FOR OPERATING THE T.V. CINE.

TO LIGHT UP THE PROJECTOR LAMP, connect the **T.V. CINE** to a LANTERN BATTERY (Ever Ready R906 or any similar make) If it is to be operated from the mains, use the MINICINE TRANSFORMER as explained below.

Separate the back half (1) from the front half (4) by gently sliding them apart, and thread the flex through the rear hole in the back half (1) to connect it with the 2 pins placed over the lamp. Then slide back the back half (1) into the front half (4) and fit the adaptor into the nearest lampholder.

To erect the **T.V. CINE** put the mirror up as shown on the illustration and insert the projector as far as it will go. Tilt

the mirror until the picture is well centred and gently adjust the angle of the screen front to obtain maximum brilliance relative to the height of your eyes.

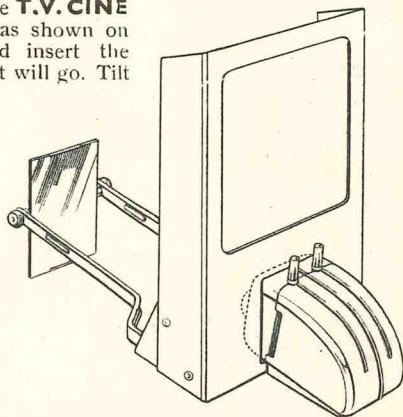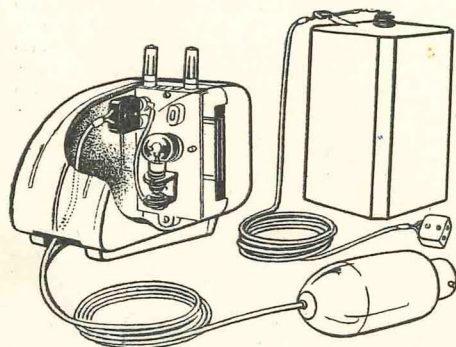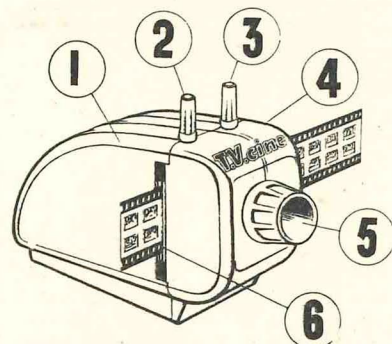

## POST CARD


(PRINTED MATTER)

1½d

*Messrs. Martin Lucas Ltd.,  
Drury Lane,  
HOLLINWOOD,  
OLDHAM, (Lancs)*

TO FIT THE FILM, slide it into the right hand slot (6) as far as it will go. The film should be inserted with the pictures upside down in the direction as shown by the arrow on the filmstrip. Turn the winding knob (3) until a picture is projected on to the screen. Now rotate the levelling knob (2) to get the top row of pictures into the correct position. The film is focussed by means of the focussing bush (5) on the front of the projector. The projector is now ready for use and is operated merely by turning the winding knob (3). After the last picture of the top row has been shown, rotate the levelling knob (2) in order to switch over to the second row of pictures. The winding knob (3) is first turned clockwise to show the pictures of the top row and the other way round for the next row of pictures. Follow these instructions for **T.V. CINE** films, **EAGLE** and **GIRL** films.

TO SHOW THE MINICINE FILMS which have 4 rows of pictures, set the first row as explained above and rotate the levelling knob (2) to switch over to the 2nd, 3rd and 4th rows. Before showing MINICINE films remove the adaptor which is parked on the boss above the lamp and fit it over the lampholder. The adaptor reduces the aperture of the **T.V. CINE** to the size required for the MINICINE films.

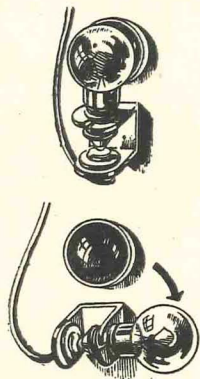

TO REPLACE AND FOCUS THE BULB OR CLEAN THE LENSES, separate the back half (1) from the front half (4) and remove the burnt out bulb by turning it as shown in the diagram. The new bulb should be 6v. 5 amps. After fitting the new bulb and turning it upright, it should be properly focussed by lighting up the projector and adjusting the bulb to a position which ensures maximum brilliance without any shadow on the screen. When this has been achieved, the two halves should be reunited and the projector is ready for use once more. If necessary, the lenses may be cleaned by dusting them with a very fine and soft brush, but on no account should anything hard be used as this might damage the surface of the lenses.

If the projector should be dropped accidentally, it may be necessary to refocus the bulb by the method described above.

*Please do not hesitate to write to us about any trouble you may experience. We shall be pleased to help you.*

**PLEASE TEAR OFF THIS REGISTRATION CARD AND POST TO-DAY.**

*Dear Sirs,*

*Please send me, free of charge, the latest Film List at regular intervals.*

*Yours faithfully,*

Name ( block letters ) .....

Address .....