



Los Angeles, Ca. 91302

ITEM NO. 3003
POWER RANGERS SLIDE PROJECTOR

DIRECTIONS :

1. USE IN DARKEN ROOM FOR BEST RESULT
2. APPROXIMATELY FOUR FEET FROM WALL
3. TO OPEN BATTERY BOX, PUSH IN SQUARES ON EACH SIDE OF THE PROJECTOR
4. TO CLOSE BATTERY BOX, PUSH IN TABS AND INSERT INTO THE SLOTS IN THE BODY
5. **IMPORTANT FOCUS** - MUST EXTEND LENSE TUBE BY PULLING IT OUT AS FAR AS NECESSARY, TURNING LENSE AS YOU PULL OUT TUBE, IF LENSE TUBE GETS DETACHED, SIMPLY INSERT BACK INTO PROJECTOR
6. KEEP LENSE CLEAN
7. TO START : PUSH DOWN
8. TO STOP : PUSH UP
9. USE 2 "D" BATTERIES (NOT INCLUDED)

