

REMOVE BEFORE USING

OPERATING INSTRUCTIONS



VIEW-MASTER

FOCUSING STEREO VIEWER

BATTERIES—Your Viewer is packed without batteries

- Unscrew aluminum nut on bottom
- Lift off front half of viewer
- Insert two size "D" dry cells (see battery diagram inside back)
- Insert bottom of batteries first, then press top **firmly** into place.

SAWYER'S TRANSFORMER WITH CORD
converts 110-v. AC household electricity for use with this Viewer

- When using transformer, remove batteries to obtain maximum illumination and prolong bulb and battery life.

OVER

OPERATING INSTRUCTIONS

REEL INSERTION — Grasp VIEW-MASTER Picture Reel above printed "V" • Insert in slot at top of Viewer • Push all the way down • Register first picture by pulling the Picture Changing Lever at the right all the way down.

LIGHT SWITCH — On the back of the Viewer, where your fingers naturally grip it, the VIEW-MASTER name-plate is a pressure bar which switches on the Viewer's internal illumination.

FOCUSING — Adjust the Viewer for your eyes by turning the knurled knob on the right lens barrel • Move the lenses in or out until the picture is sharp.

CHANGING PICTURES — Pull down the Picture Changing Lever to view each of the seven stereo color pictures on the VIEW-MASTER Reel.

CLEAN LENSES — Keep your Viewer lenses clean for brighter, clearer pictures • Blow any dust away from the eyepieces and wipe lenses with a dry, soft cloth.

® SAWYER'S INC., PORTLAND, ORE., U.S.A. MARCA
REGISTRADA, MARQUE DEPOSEE. PRINTED IN U.S.A.

VIEW-MASTER

PART NO. 166-909-02