



Using a Philips screw driver, remove the battery door. Insert three (3) "AAA" batteries (not included), as shown. Re-attach the battery door. Alkaline batteries are recommended. Do not use rechargeable batteries.

Important Battery Information

- Do not mix old and new batteries.
 Do not mix alkaline, standard
- (carbon-zinc)
- Remove batteries if toy will not be used for a long period of time.

Insert the cartridge into the viewer, as shown. Lock the cartridge into place by sliding the cartridge lock onto the cartridge. You'll hear a sound when the cartridge is fully inserted.

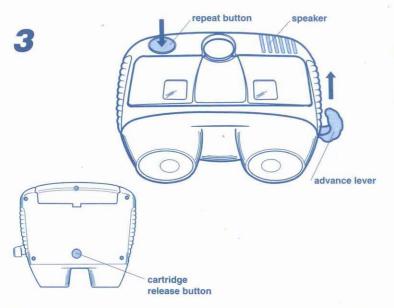

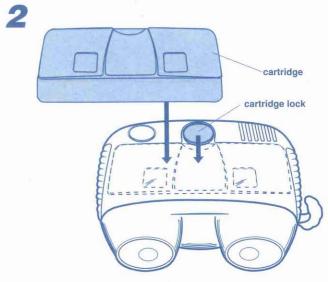

Hold the viewer to your eyes and advance the film by pushing the advance lever. This will advance the frames and activate the sound associated with that frame. Press the repeat button to hear the sound again. Note: The repeat button can only be used to hear the sound of the current frame. To remove the cartridge, release the cartridge lock by sliding it off of the cartridge. Press the cartridge release button on the bottom of the viewer and lift the cartridge out of the viewer.